

What to do if...

What to do if...



A tire punctures

P. 474/
476

If you have a flat tire



The engine does not start

P. 52

Engine immobilizer system

P. 486

If the engine will not start

P. 492

If the battery is discharged



The shift lever cannot be moved out

P. 487

If the shift lever cannot be shifted from "P"



The engine coolant temperature gauge enters the red zone

P. 496

If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 488

If you lose your keys



The battery runs out

P. 492

If the battery is discharged



The doors cannot be locked

P. 17

Doors



The horn begins to sound

P. 54

Alarm



The vehicle is stuck in mud or sand

P. 499

If the vehicle becomes stuck

 The warning light or indicator light comes on P. 449 If the warning light turns on



Warning lights

	Brake system warning light		Malfunction indicator lamp
or		or	
	P. 449		P. 450
	ABS warning light		Driver's seat belt reminder light
or			P. 452
	P. 451		Front passenger's seat belt reminder light
			P. 452
	ECB*/VSC warning light		Tire pressure warning light
	P. 451		P. 452
	Low fuel level warning light		Electric power steering warning light
	P. 451		P. 451
	SRS warning light		Pre-collision system warning light
	P. 450		P. 451
	Open door warning light		Master warning light
	P. 451		P. 452
	Charging system warning light		
	P. 450		

*: Electronically Controlled Brake System

 The warning message is displayed P. 455 If the warning message is displayed